EXP NO:5B TOPOLOGICAL CONNECTIONS CISCO PACKET TRACER

DATE: 16.8.24

AIM: To Design a simple topology using CiscoPacket Tracer

1) PEER TO PEER CONNECTION:

1. Open Cisco Packet Tracer

• Launch Cisco Packet Tracer on your computer.

2. Add Devices

• Drag and drop the devices you want to connect (e.g., PCs, servers) from the device list to the workspace. For a peer-to-peer connection, typically, you'll use two PCs.

3. Connect Devices

- Use a **Copper Straight-Through cable** for the connection if connecting similar devices (like two PCs).
 - Click on the Connections icon (lightning bolt) from the bottom left of the Packet Tracer window.
 - o Choose Copper Straight-Through.
 - Click on one PC and then click on the other PC to connect them.

4. Configure IP Addresses

You need to assign IP addresses to both PCs so they can communicate directly.

For PC1:

- Click on PC1 in the workspace.
- o Go to the **Desktop** tab.
- o Click on **IP Configuration**.
- o Set the **IP Address** (e.g., 192.168.1.1).
- o Set the **Subnet Mask** (e.g., 255.255.255.0).


For PC2:

- o Click on PC2 in the workspace.
- o Go to the **Desktop** tab.
- o Click on **IP Configuration**.
- o Set the **IP Address** (e.g., 192.168.1.2).
- o Set the **Subnet Mask** (e.g., 255.255.255.0).

5. Verify the Connection

- Use the **Command Prompt** on each PC to check connectivity.
 - o On PC1, open Command Prompt from the Desktop tab.
 - o Type ping 192.168.1.2 and press Enter. This pings PC2.
 - o On **PC2**, open **Command Prompt** and type ping 192.168.1.1 to ping PC1.

If the pings are successful, the peer-to-peer connection is working.

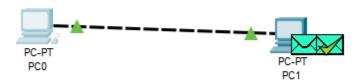

2)2 SWITCHES, 8PC's AND ONE ROUTER:

1. Open Cisco Packet Tracer:

Launch Cisco Packet Tracer on your computer.

2. Add a Router:

- Click on the "Network Devices" icon (router icon) in the bottom-left pane.
- Select the "Routers" category.
- Drag and drop a router (e.g., 2901 or 1941) onto the workspace.

3. Add a Switch:

- Click on the "Network Devices" icon again.
- Select the "Switches" category.
- Drag and drop a switch (e.g., 2960) onto the workspace.

4. Add PCs:

- Click on the "End Devices" icon (computer icon).
- Select "PC" from the available options.
- Drag and drop eight PCs onto the workspace.

5. Connect the Switch to the Router:

- Click on the "Connections" icon (lightning bolt).
- Choose "Copper Straight-Through" cable.
- Click on the router, then select one of the Ethernet interfaces (e.g., GigabitEthernet0/0).
- Click on the switch, then select one of the switch ports (e.g., FastEthernet0/1).

6. Connect the PCs to the Switch:

- Using the "Copper Straight-Through" cable, connect each PC to a port on the switch:
 - o Click on PC1, select the Ethernet port (usually FastEthernet0).
 - o Click on the switch, and select an available port (e.g., FastEthernet0/2).
 - o Repeat this process for each PC, connecting them to different ports on the switch.

7. Configure IP Addresses:

- For each PC, click on the PC, go to the "Desktop" tab, and then click on "IP Configuration."
- Assign a unique IP address and subnet mask to each PC. For example, use the following IP addresses:
 - o **PC1:** IP Address: 192.168.1.2, Subnet Mask: 255.255.255.0
 - o **PC2:** IP Address: 192.168.1.3, Subnet Mask: 255.255.255.0
 - o **PC3:** IP Address: 192.168.1.4, Subnet Mask: 255.255.255.0
 - o **PC4:** IP Address: 192.168.1.5, Subnet Mask: 255.255.255.0
 - o **PC5:** IP Address: 192.168.1.6, Subnet Mask: 255.255.255.0
 - o **PC6:** IP Address: 192.168.1.7, Subnet Mask: 255.255.255.0
 - o **PC7:** IP Address: 192.168.1.8, Subnet Mask: 255.255.255.0
 - o **PC8:** IP Address: 192.168.1.9, Subnet Mask: 255.255.255.0

8. Configure the Router:

- Click on the router and go to the "CLI" tab to enter command-line interface mode.
- Enter the following commands to configure the router:


plaintext Copy code enable

configure terminal interface GigabitEthernet0/0 ip address 192.168.1.1 255.255.255.0 no shutdown exit

9. Verify Connectivity:

- On each PC, open the "Command Prompt" from the "Desktop" tab.
- Use the ping command to check connectivity to the router. For example, from PC1, type ping 192.168.1.1 and press Enter.
- Ensure that all PCs can successfully ping the router's IP address and each other.

By following these steps, you should have a network with eight PCs connected through a switch to a router, with all devices properly configured for communication.

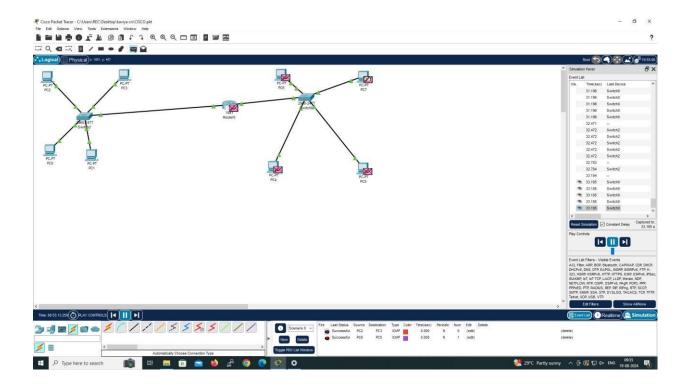

3) 4 PC's AND ONE HUB:

1. **Open Cisco Packet Tracer:** Launch the Cisco Packet Tracer application on your computer.

2. Add a Hub:

- o On the bottom-left side of the interface, click on the "Network Devices" icon (it looks like a router).
- o Select the "Hubs" category.
- o Drag and drop a "Hub" onto the workspace.

3. Add PCs:

- o Click on the "End Devices" icon (it looks like a computer).
- Select "PC" from the available options.
- o Drag and drop four PCs onto the workspace.

4. Connect PCs to the Hub:

- o Click on the "Connections" icon (it looks like a lightning bolt).
- Select "Copper Straight-Through" cable (often shown as a solid yellow line with connectors).
- Click on the first PC, then select the appropriate Ethernet port (usually "FastEthernet0" or similar).
- o Click on the hub, then select one of its available ports (e.g., "FastEthernet0/1").
- Repeat this process to connect each of the remaining PCs to the hub, using different ports on the hub for each connection.


5. Configure IP Addresses:

- o Click on each PC and select the "Desktop" tab.
- o Click on "IP Configuration."
- Assign a unique IP address and subnet mask to each PC. For example:
 - **PC1:** IP Address: 192.168.1.1, Subnet Mask: 255.255.255.0
 - **PC2:** IP Address: 192.168.1.2, Subnet Mask: 255.255.255.0
 - **PC3:** IP Address: 192.168.1.3, Subnet Mask: 255.255.255.0
 - **PC4:** IP Address: 192.168.1.4, Subnet Mask: 255.255.255.0

6. Verify Connectivity:

- o Go to one of the PCs, open the "Command Prompt" from the "Desktop" tab.
- Use the ping command to check connectivity to the other PCs. For example, from PC1, you can ping PC2 by typing ping 192.168.1.2 and pressing Enter.
- Ensure that all PCs can ping each other successfully.

By following these steps, you should be able to successfully set up a network with four PCs connected through a hub in Cisco Packet Tracer.

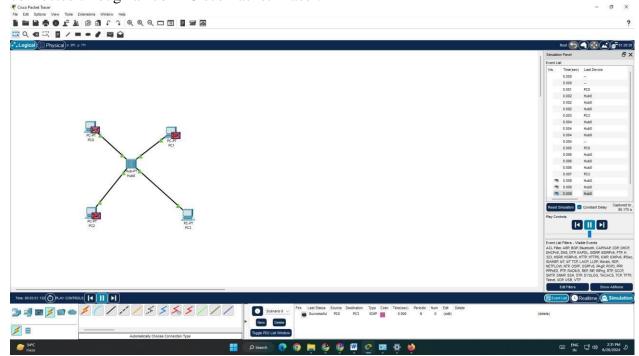

4) 4 PC's AND ONE SWITCH:

1. Open Cisco Packet Tracer:

Launch the Cisco Packet Tracer application on your computer.

2. Add a Switch:

- Click on the "Network Devices" icon (router icon) at the bottom of the screen.
- Select the "Switches" category.
- Drag and drop a switch (e.g., 2960) onto the workspace.

3. Add PCs:

- Click on the "End Devices" icon (computer icon).
- Select "PC" from the available options.
- Drag and drop four PCs onto the workspace.

4. Connect PCs to the Switch:

- Click on the "Connections" icon (lightning bolt).
- Select "Copper Straight-Through" cable.

- Click on the first PC, select its Ethernet port (usually FastEthernet0).
- Click on the switch, select one of its available ports (e.g., FastEthernet0/1).
- Repeat this process to connect each of the remaining PCs to different ports on the switch:
 - o **PC2:** Connect to FastEthernet0/2.
 - o **PC3:** Connect to FastEthernet0/3.
 - o **PC4:** Connect to FastEthernet0/4.

5. Configure IP Addresses:

- Click on each PC, go to the "Desktop" tab, and then click on "IP Configuration."
- Assign a unique IP address and subnet mask to each PC. For example:
 - o **PC1:** IP Address: 192.168.1.2, Subnet Mask: 255.255.255.0
 - o **PC2:** IP Address: 192.168.1.3, Subnet Mask: 255.255.255.0
 - o **PC3:** IP Address: 192.168.1.4, Subnet Mask: 255.255.255.0
 - o **PC4:** IP Address: 192.168.1.5, Subnet Mask: 255.255.255.0

6. Verify Connectivity:

- On each PC, open the "Command Prompt" from the "Desktop" tab.
- Use the ping command to check connectivity to the other PCs. For example, from PC1, you can type ping 192.168.1.3 and press Enter to ping PC2.
- Ensure that all PCs can successfully ping each other, indicating that the network is properly set up.

By following these steps, you should be able to successfully set up a network with four PCs connected through a switch in Cisco Packet Tracer.

